

Today, the tools to produce injection-molded parts are often built from modified CAD data. These modifications include the incorporation of uniform and non-uniform shrink factors, adding of draft angles, parting lines etc. Best practice knowledge is also incorporated to reduce thick versus thin material areas and the possible addition of features to reduce the warping and twisting of the part. Using these basic rules, tools for simple parts can usually be calculated and milled to produce good quality parts with no further modifications needed.

A close-up photograph of a camera lens, showing the internal elements and the front element. The lens is black and has a red stripe on the left side. The background is blurred.




Fig. 2: ATOS measuring data of a Blackberry cover shown as shaded point cloud and enlarged detail with curvature and accuracy dependent optimized STL data

Today, innovative companies use optical measurement technology to speed up the first article inspection process and to minimize the effort needed to ensure the product quality. Using optical systems, stable parts can be measured efficiently and with high data density (millions of measuring points) without the need to produce and to manage individual fixtures (Fig. 1, 2). Single components can be measured unmounted, or in an assembled configuration, as well as under load in order to define their shape, deformation and behavior in use.

Analysis of Shrinkage and Warpage

After measuring the component with the ATOS digitizing system the bundled ATOS Inspection Software allows immediately the professional evaluation of the data.

With the ATOS Inspection Software, warpage and shrinkage of an injection-molded part can be made visible in a colored deviation plot (Fig. 3). Due to this full-field comparison of the measured data with the CAD data (or data of a sample part) deformed areas are immediately localizable and easy to understand. The full-field 3D measurement with ATOS reveals also those problematic areas which could easily be overlooked when using only point-by-point measurement with a tactile CMM.

Local and global warpage and deviations in shape can be visualized in the ATOS Inspection Software by using different methods like 3-2-1, RPS, Best-Fit, etc. to align the measured data to the CAD data. For achieving a reliable local or global alignment, the full-field data information of the ATOS measuring system is essential as only the dense surface information offers enough measuring points for different selections. Parting surfaces, for example, are often used as reference for the design of a part and thus are the preferred measuring basis for tactile measuring machines. However, if the parting surface is not planar, a clamping set-up on a CMM would lead to wrong measuring results.

The ATOS system captures objects without contact and the global alignment of the 3D data in the bundled ATOS Inspection Software reveals the warpage of the parting surface of an unloaded part immediately (Fig. 4).

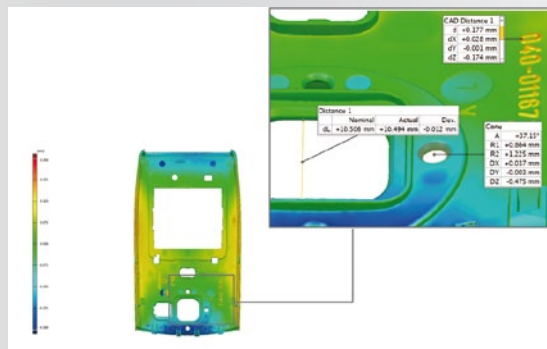


Fig. 3: Deviation of the digitized data of the sample part from the CAD data (nominal data), the ATOS Inspection Software immediately shows warpage and bending of the housing cover

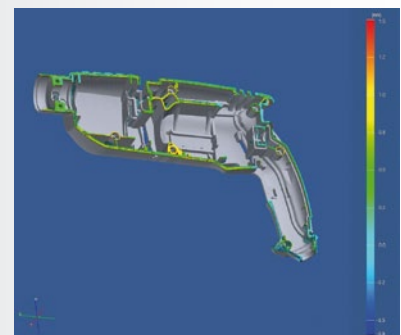


Fig. 4: Deviation of the parting surfaces of a housing part to a plane, warpage of up to 1.2 mm

First Article Inspection

For the classical 2D first article inspection analysis and for checking functional dimensions, the ATOS Inspection Software offers a sophisticated scalar CMM inspection tool (Fig. 5) and professional GD&T functionality (Geometric Dimensioning and Tolerancing, Fig. 6). The GD&T principles such as symbols, rules and definitions are internationally defined in the EN ISO 1101 and ASME Y14.5 standards. Thus, the verification of a part can be understood worldwide regardless of the national language of the respective inspector. Furthermore Geometric Dimensioning and Tolerancing allows for continuous quality assurance of a part starting from design up to entire production as it exactly describes the function of a part or an assembly regarding dimensions, shape and position.

The GD&T-module allows to check for flatness, cylindricity, parallelism, position, etc. with dependence of the respective geometric datum.



Fig. 5: 2D analysis with the ATOS CMM inspection tool

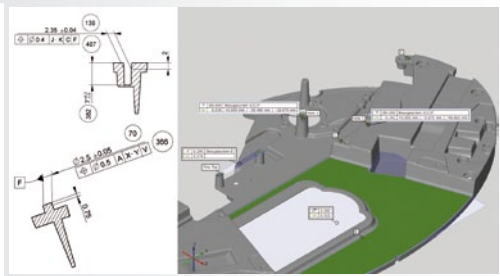


Fig. 6: Analysis of a part using the ATOS GD&T module (Geometric Dimensioning and Tolerancing)

The full-field measured data allow also to apply the material thickness inspection function of the ATOS Inspection Software to check for sink marks and material accumulation of injection-molded parts (Fig. 7). Inspection sections provide an additional detailed analysis (Fig. 8).

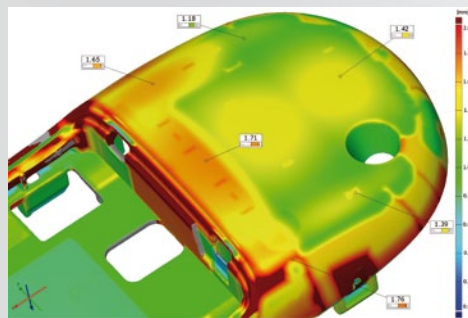


Fig. 7: Material thickness analysis in the ATOS Inspection Software

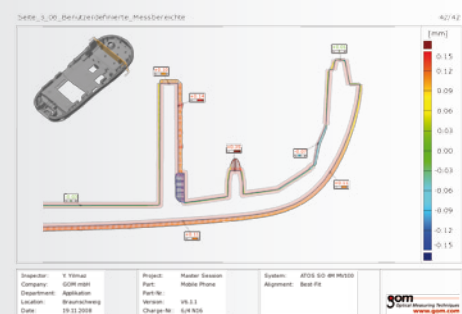


Fig. 8: Detailed 2D analysis with inspection sections

As the digitized data can be stored and reloaded easily, individual measuring values and sections can be derived and analyzed from this data at any time later on. Wear and changes in the production process are easy to verify and control. Thus, the 3D data of first article inspection and of the production accompanying control secure the quality assurance of a product over the whole life cycle.

If deviations regarding the functionality and quality of the part are understood, exact dimensional values can be derived from the digitized ATOS data and the corrections can be forwarded to the tooling manufacturer.

ATOS Stereo Camera System

Measuring systems which are used in quality control have to produce reliable and accurate data. Optical systems require two cameras in a stereo setup to fulfill this demand. Thus, the self-monitoring ATOS system reliably detects object movements during measuring and also checks the validity of the calibration. Due to the stereo setup, the individual measurements are also automatically transformed into a common object coordinate system with the help of easy applicable reference points. An interruption of the digitizing process for time consuming manual alignment of individual measurements by the user is not necessary.

The flexible ATOS system can be equipped with different measuring volumes and easily adapted within a few minutes to a wide range of measuring tasks and resolution. The fast setup of the sensor allows measurement of big parts with a large measuring volume or capturing small details with high resolution. The entire component spectrum from small to large parts can be measured with just one system (Fig. 9, 10).

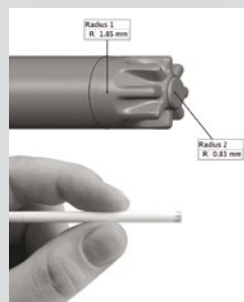


Fig. 9: Display of a small gear wheel and an angle adapter and their deviations from the respective nominal data (CAD data), measuring volume 30 x 20 mm

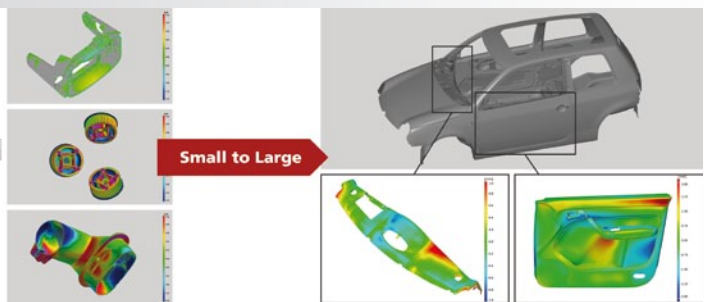


Fig. 10: Warpage of interior car parts, measuring volume 500 mm

In addition, the GOM Touch Probe combines measuring of difficult to access areas with measuring freeform surfaces of complex components within one system (Fig. 11). The ATOS sensor in this case is used as an optical tracking device for the hand-held Touch Probe for live inspection of primitives, point deviations to CAD, etc. (Fig. 12).



Fig. 11: GOM Touch Probe

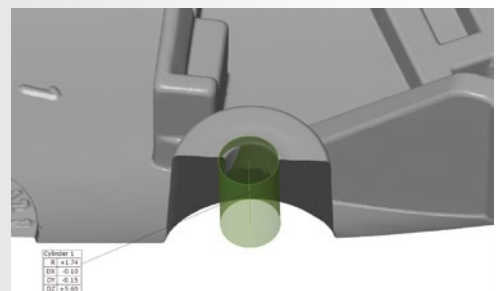


Fig. 12: Touch probed cylinder

During mold try-out - particularly in case of multi-cavity molds - often a considerable amount of samples needs to be tested. In order to save time and resources, both the data acquisition and the data evaluation requires automation. Capturing the measuring data can be automated to a large extent with the help of robots, rotation tables or with measuring cells like the Multi Axis Motion Unit. The evaluation of the measuring data can be automated in the ATOS Inspection Software using macros and scripts.



Fig. 13: Multi Axis Motion Unit



Fig. 14: Customized inspection report

Summary

High-quality digitizing systems produce data with comparable accuracy to conventional coordinate measuring machines. The advantage of the optical measurement system is its fast acquisition time, the amount of measured data and the flexible use of the system. In addition, the digitized data creates a visual 3D view of the part and its deviations from the nominal data and is also exportable for further evaluation and distribution.

An increasing number of companies are incorporating certified optical measurement systems into their measuring departments not necessarily to achieve a better measurement accuracy in the first place but to bring the measuring technology closer to production and to guarantee a comprehensive QA by a full-field component analysis. In addition, the clear colored deviation plot allows for a fast analysis of warpage and deviations and thus speeding up the optimization of the tool during mold try-out.

We would like to thank Braun, Bosch/Scintilla, Nokia, Bang & Olufsen, Volkswagen for their kind cooperation.